








Nikon Wireless & Wired Remotes & Releases - Camera Compatibility Chart






Device	Compatible Cameras		
 <p>WR-1 Remote Controller</p>	<p>These cameras have a 10 pin connector and use the MC-37 Connecting Cord:</p> <p>D5 D4S/D4 D3/D3X/D3S D2X/D2Xs/D2Hs D810/D810A D800/D800E D700 D500 D300/D300s F100 SLR</p>	<p>These cameras have an accessory terminal and use the MC-38 Connecting Cord:</p> <p>Df D750 D610 D600 D7200 D7100 D7000</p>	<p>These cameras have an accessory terminal and use the MC-38 Connecting Cord:</p> <p>D5500 D5300 D5200 D5100 D5000 D3300 D3200 D3100 D90</p> <p><i>** The Wireless Remote Controllers can be used with the F100, D2X, D2Xs, D2Hs, and D200, but the shutter cannot be released with the F100 in self-timer mode, while the D2X, D2Xs, D2Hs, and D200 will temporarily display [GPS] if the exposure meters are activated after the unit is attached.</i></p>
 <p>WR-T10 + WR-R10 + WR-A10 Remote Controller Kit</p>	<p>These cameras must use the WR-A10 (10 pin) Adapter:</p> <p>D5 D4S/D4 D3/D3X/D3S D2Hs/D2Xs D810/D810A D800/D800E D700 D500 D300/D300s D200</p>	<p>These cameras have an accessory terminal and do not use the WR-A10 Adapter:</p> <p>Df D750 D610 D600 D7200 D7100 D7000 D5500 D5300 D5200 D5100 D5000</p>	<p>These cameras have an accessory terminal and do not use the WR-A10 Adapter:</p> <p>D3300 D3200 D3100 D90 COOLPIX A COOLPIX P7700 COOLPIX P7800 F100 SLR</p> <p><i>** The Wireless Remote Controllers can be used with the F100, D2X, D2Xs, D2Hs, and D200, but the shutter cannot be released with the F100 in self-timer mode, while the D2X, D2Xs, D2Hs, and D200 will temporarily display [GPS] if the exposure meters are activated after the unit is attached.</i></p>
 <p>WR-R10 Remote Controller (transceiver)</p>	<p>Compatible with:</p> <p>Df D750 D610 D600 D7200 D7100 D7000 D5500 D5300 D5200 D5100 D5000</p>	<p>Compatible with:</p> <p>D3300 D3200 D3100 D90 COOLPIX A COOLPIX P7700 COOLPIX P7800 F100 SLR</p>	<p>With the WR-A10 Remote Controller Adapter, the WR-R10 also works with the following cameras:</p> <p>D5 D4S/D4 D3/D3X/D3S D2X/D2Xs/D2Hs D810/D810A D800/D800E D700 D500 D300/D300s</p>
 <p>WR-A10 Remote Controller Adapter for cameras with 10 pin connectors</p>	<p>With the WR-A10 Remote Controller Adapter (10 pin), the WR-R10 also works with the following cameras:</p> <p>D5 D4S/D4 D3/D3X/D3S D2Hs/D2Xs D810/D810A D800/D800E D700 D500 D300/D300s D200</p> <p><i>* The WR-A10 Remote Controller Adapter is a 10 pin adapter that lets photographers using select D-SLRs with a 10 pin connection use the WR-R10. The adapter must be used as the WR-R10 is designed to fit the accessory terminal that certain D-SLRs use.</i></p>		
 <p>WR-T10 Remote Controller (transmitter)</p>	<p>Compatible with:</p> <p>D5 D4S/D4 D3/D3X/D3S D2X/D2Xs/D2Hs D810/D810A D800/D800E D700 D500 D300/D300s</p>	<p>Compatible with:</p> <p>Df D750 D610 D600 D7200 D7100 D7000 D5500 D5300 D5200 D5100 D5000</p>	<p>Compatible with:</p> <p>D3300 D3200 D3100 D90 COOLPIX A COOLPIX P7800 COOLPIX P7700 F100 SLR</p> <p><i>* The WR-T10 Remote Controller can also control the WR-1 in addition to the WR-R10.</i></p> <p><i>** The Wireless Remote Controllers can be used with the F100, D2X, D2Xs, D2Hs, and D200, but the shutter cannot be released with the F100 in self-timer mode, while the D2X, D2Xs, D2Hs, and D200 will temporarily display [GPS] if the exposure meters are activated after the unit is attached.</i></p>

** products not shown to scale
** chart up to date as of 2.19.16*



 <p>WU-1a Wireless Mobile Adapter</p>	<p>Compatible with:</p> <p>Df D7100 D5200 D3300 D3200 Nikon 1 S2</p>	<p>Compatible with:</p> <p>COOLPIX A COOLPIX P7800 COOLPIX P530 COOLPIX P520 COOLPIX P330</p>
 <p>WU-1b Wireless Mobile Adapter</p>	<p>Compatible with:</p> <p>D610 D600 Nikon 1 AW1 Nikon 1 S1 Nikon 1 V2 Nikon 1 J3</p>	
 <p>UT-1 Communication Unit</p>	<p>Compatible with:</p> <p>D4S/D4 D810/D810A D800/D800E</p>	<p>Compatible with:</p> <p>D750 D7200 D7100 D7000</p>
 <p>UT-1 Communication Unit + WT-5A Wireless Transmitter</p>	<p>Compatible with:</p> <p>D4S/D4 D810/D810A D800/D800E</p>	<p>Compatible with:</p> <p>D750 D7200 D7100 D7000</p>
 <p>WT-5A Wireless Transmitter</p>	<p>Compatible with:</p> <p>D4S/D4 D5</p>	<p>The WT-5A is also compatible with the following cameras, when used with the UT-1:</p> <p>D810/D810A D800/D800E D750</p> <p>The WT-5A is also compatible with the following cameras, when used with the UT-1:</p> <p>D7200 D7100 D7000</p>
 <p>WT-6A Wireless Transmitter</p>	<p>Compatible with:</p> <p>D5</p>	
 <p>WT-7A Wireless Transmitter</p>	<p>Compatible with:</p> <p>D500</p>	
 <p>WT-4A Wireless Transmitter</p>	<p>Compatible with:</p> <p>D4S/D4 D3 Series D800/D800E D700 D300S/D300 D7000</p>	



 <p>ML-L3 Wireless Remote Control (Infrared)</p>	<p>Compatible with:</p> <p>D750 D610 D600 D7200 D7100 D7000 D5500 D5300 D5200</p>	<p>Compatible with:</p> <p>D5100 D5000 D3300 D3200 D3000 D90</p>	<p>Compatible with:</p> <p>Nikon 1 V3 Nikon 1 V2 Nikon 1 V1 Nikon 1 J2 Nikon 1 J1</p>	<p>Compatible with:</p> <p>COOLPIX A COOLPIX P7800 COOLPIX P7700 COOLPIX P7100 COOLPIX P7000</p>
 <p>ML-3 Modulite Remote Control Set (uses the 10 pin connector)</p>	<p>Compatible with:</p> <p>D5 D4S/D4 D3 Series D2 Series D1 Series D810/D810A D800/D800E</p>	<p>Compatible with:</p> <p>D700 D500 D300/D300S D200 D100 using the MB-D100</p>		
 <p>MC-36/MC-36A Multi-Function Remote Control Cord (uses the 10 pin connector)</p>	<p>Compatible with:</p> <p>D5 D4S/D4 D3 Series D2Xs D810/D810A D800/D800E</p>	<p>Compatible with:</p> <p>D700 D500 D300/D300S D200</p>		
 <p>MC-30/MC-30A Remote Trigger Release (uses the 10 pin connector)</p>	<p>Compatible with:</p> <p>D5 D4S/D4 D3 Series D2 Series D1 Series D810/D810A D800/D800E</p>	<p>Compatible with:</p> <p>D700 D500 D300/D300S D200 D100 using the MB-D100</p>		
 <p>MC-DC2 Remote Cord (uses an accessory terminal)</p>	<p>Compatible with:</p> <p>Df D750 D610 D600 D7200 D7100 D7000 D5500 D5300 D5200</p>	<p>Compatible with:</p> <p>D5100 D5000 D3300 D3200 D3100 D90</p>	<p>Compatible with:</p> <p>COOLPIX A COOLPIX P7800 COOLPIX P7700</p>	